 


DIR[®]

ION II Free Standing

 
S06FS / S06

INSTRUCTION MANUAL

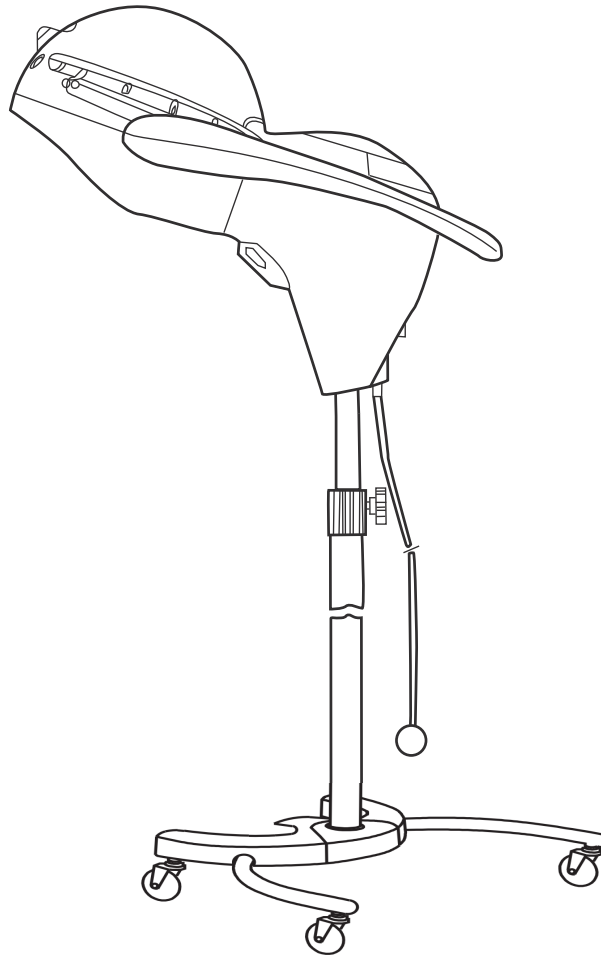


ASSEMBLY INSTRUCTIONS

Floor Standing Type

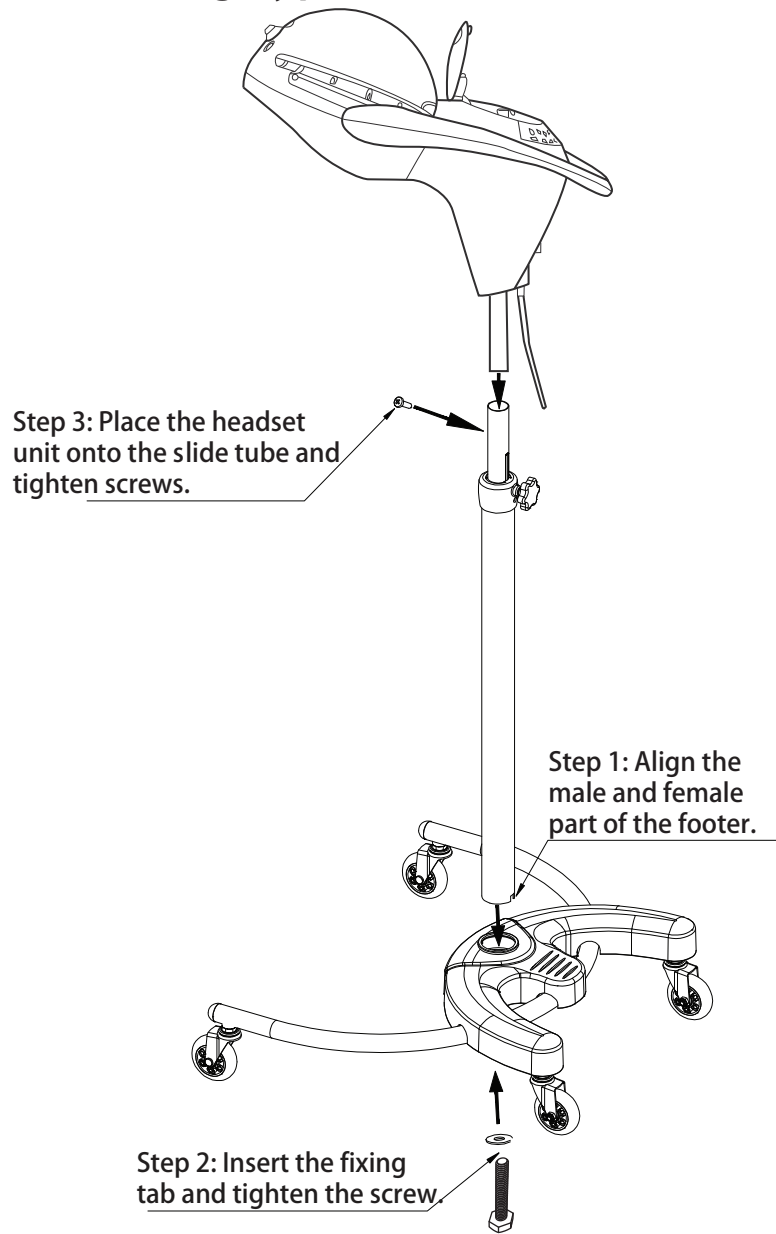

CARE INSTRUCTIONS

 1. The inner cap can get dirty easily, please clean regularly. Chemicals such as hair dyes can cause dysfunction.
2. Wipe clean with a soft, dry cloth when cleaning. If water splashes on the panel, immediately wipe it off with a dry cloth, otherwise the machine will malfunction.

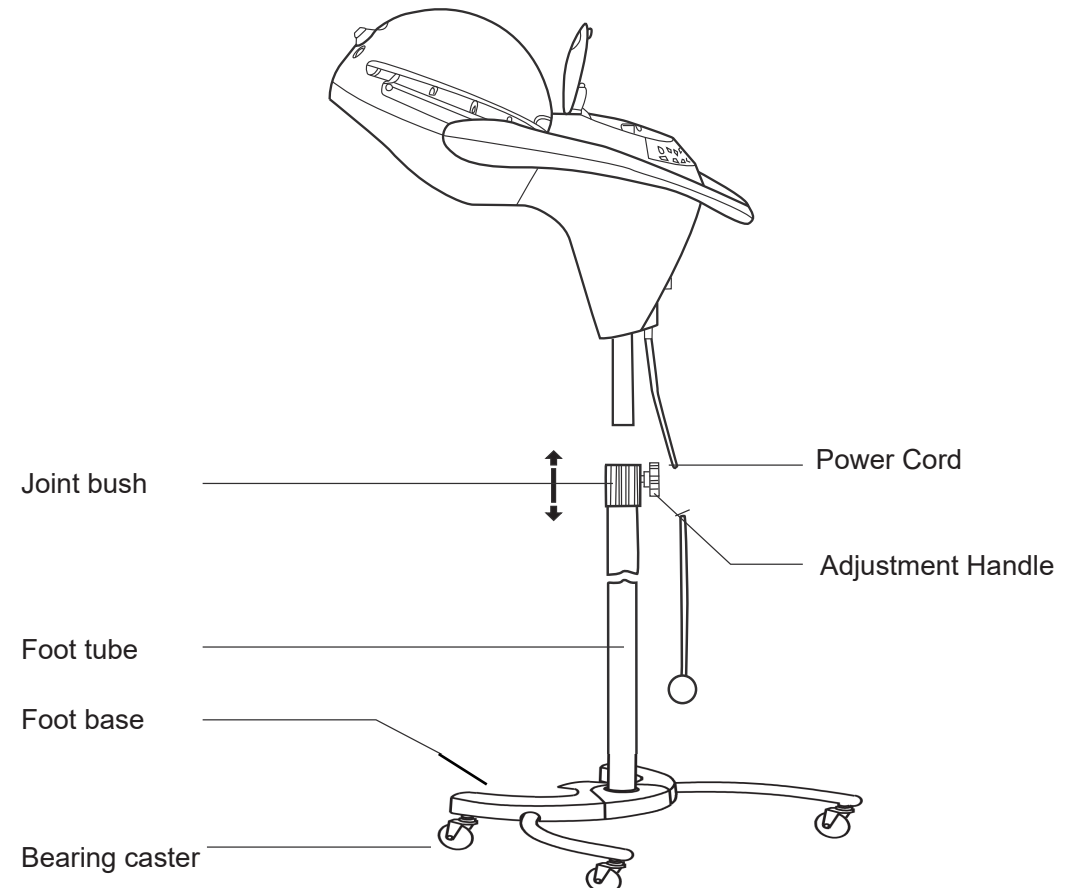


Swiveling lid


Water bottle

Heating pot

 Flow back water bottle

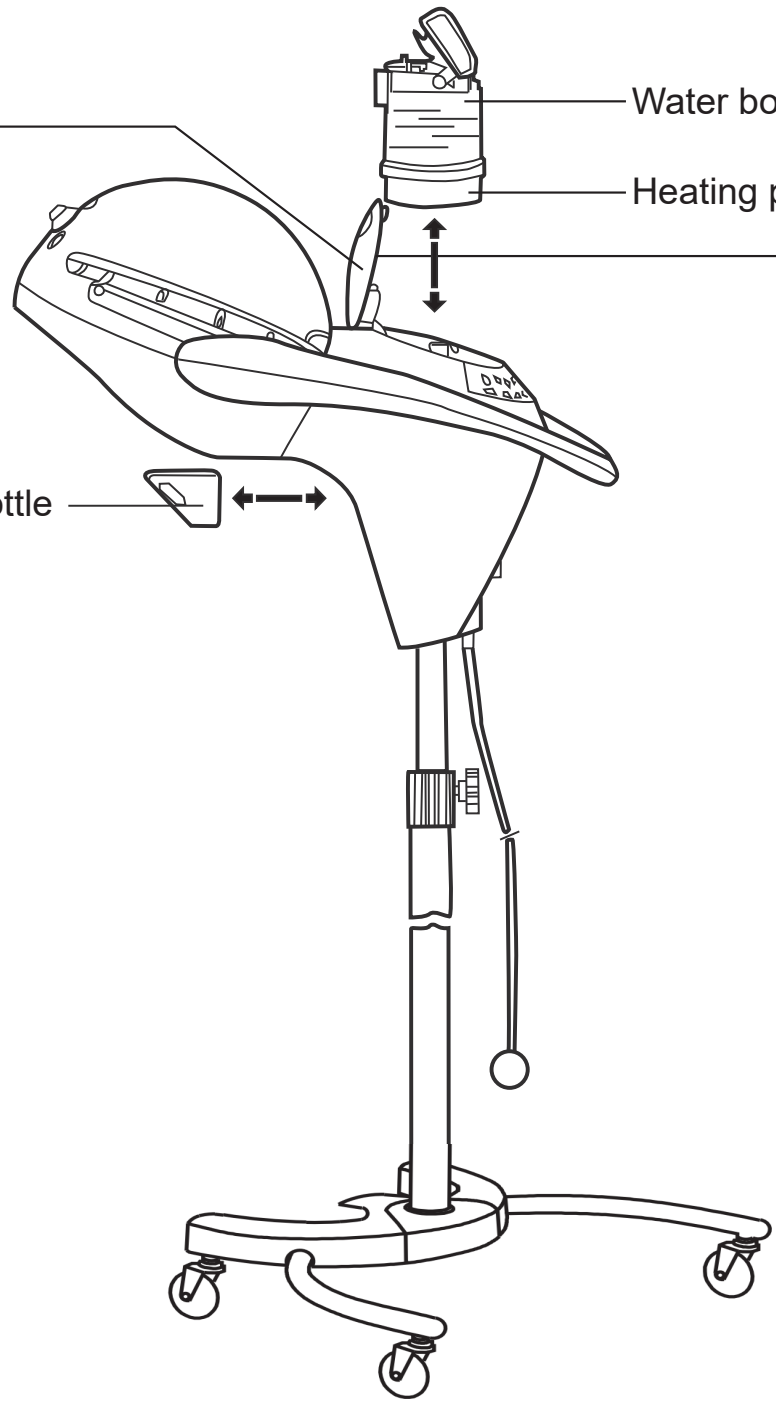

Control Panel

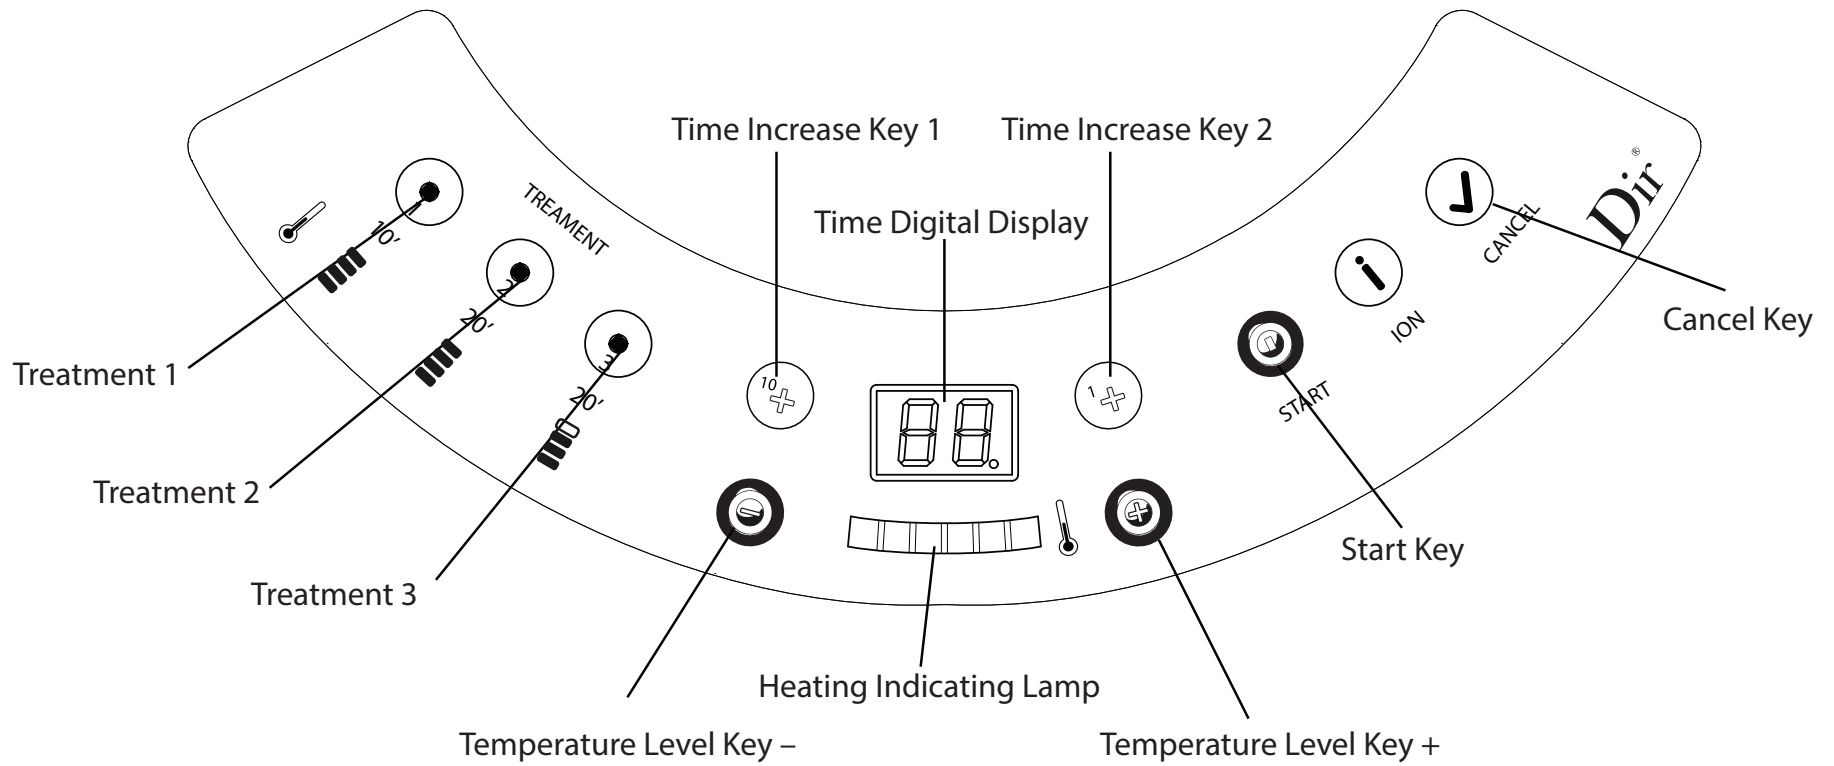 

Treatment 1

Press this key to choose Treatment 1 Programme; the preset working time is 10 minutes and the temperature level 4.

Treatment 2

Press this key to choose Treatment 2 Programme; the preset working time is 20 minutes and the temperature level is 4.

Treatment 3

Press this key to choose Treatment 3 Programme; the preset working time is 20 minutes and the temperature is level 3

Time Digital Display

Displays the working time under minutes, the longest cycle can be up to 60 minutes.

Time Increase Key 1

By pressing the button once, the treatment will increase by ten minutes; therefore if you treatment is for 60 minutes, key button 6 times.

Time Increase Key 2

By pressing the button once the treatment will increase by one minute.

Temperature Level Key –

This key is used to decrease the temperature by one level

Temperature Level Key +

This key is used to increase the temperature by one level

Start Key

Press this key to start work for each program.

Ion On/Off Key

By pressing this key the indicating lamp lights will light up; start the Ion function. By pressing this key again the lamp will turn off; close the Ion function.

Cancel Key

 
This key is used to change or reset a program.

Heating Indicating Lamp

When the lamp lights up, it shows the machine is at the heating level required.

Operation Instruction

Important: Before using please make sure that the service voltage is the same as the product rating voltage.



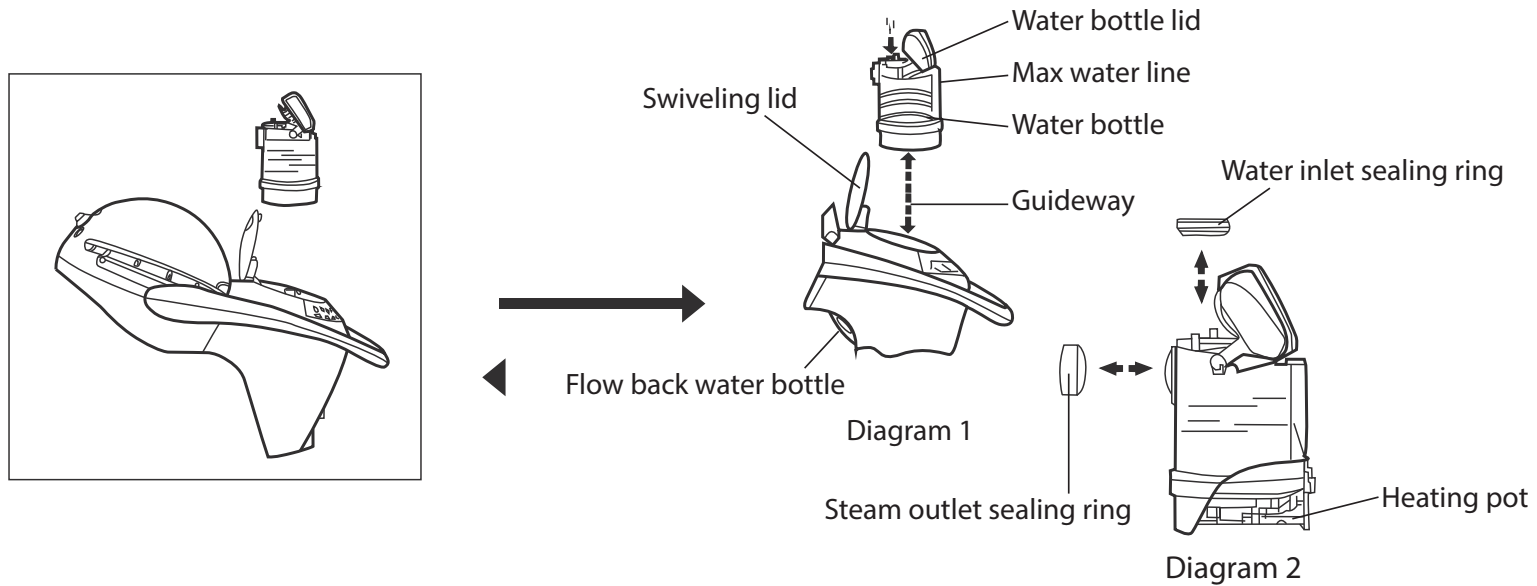


Add Water (see diagrams)

- Open the machines Swivelling Lid and take out the Flow Back Water Bottle.
- Add distilled water or similar pure water to the Water Bottle.
Please note the water level must not be higher than the Max Water Line.
- After adding water, please make sure that the Sealing Rings are placed in the appropriate position, then you can close the Water Bottle Lid.
- Along the Guideway, insert the Water Bottle into the machine. (see diagrams)

Operation Instructions

   1. Position the machine comfortably above the forehead/nape of the neck; so that the steam completely covers the customer's hair.
2. Ensure that the customer's face and eyes are outside of the steam dome.
3. After you turn on the power switch, the ozone key and the level 4 temperature lamp will light. Time on the control panel will show as "0"
4. If the machine senses that the water bottle is empty the alarm will sound, please then add water to the tank.
5. Choose the treatment required according to the customer's need, altogether the product has 3 programmes.
6. To adjust the time and temperature:
Time Increase Key 1 - digital display increases by 10 minutes
Time Increase Key 2 - digital display increases by 1 minute.
To adjust the working temperature, use the temperature adjustment + or - keys.
7. During operation, the time on the digital display will show the remaining time, the time decimal point blinks at the frequency of once per second.
During operation if you lift the swivelling lid, the machine will stop heating. Only after you close the lid will the machine continue to heat up.
When the time remaining is 3 minutes the control panel will light up.
8. To change the working programme during operation you must first press the Cancel key. When the machine cycle comes to a stop please select the programme required.
9. After finishing the programme the Time Digital display shows as "0" the alarm will also sound.
10. Once you have finished all treatments, please empty the water in the Flow Back Water Bottle.
11. After finishing operation please turn off the power source and remove the power cord.
12. This machine does not have memory function; therefore once you have turned off the machine any previous cycles will be lost.

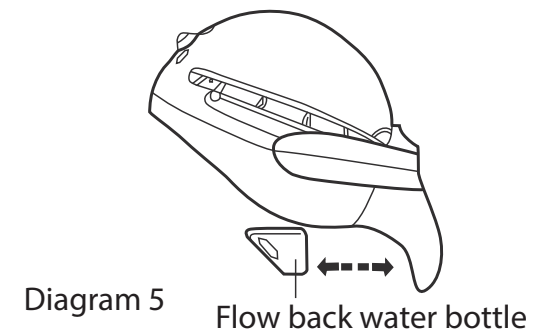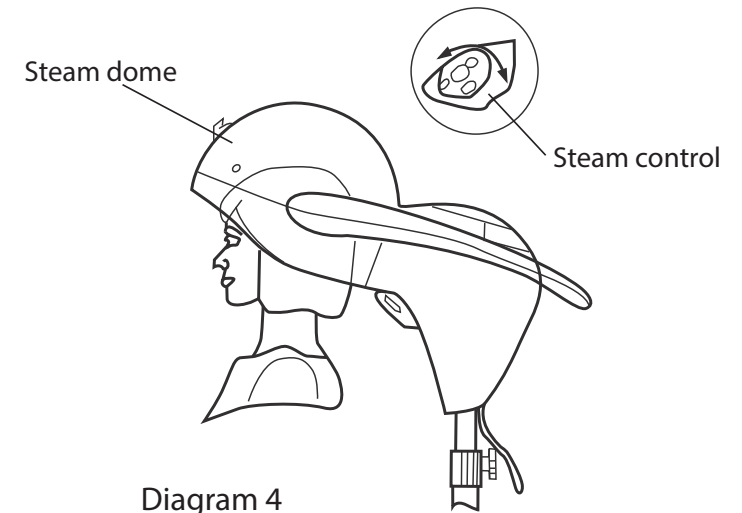
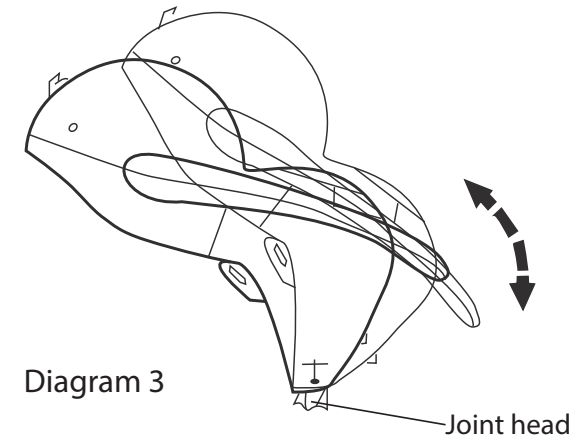


Maintenance


Before cleaning please remove the power cord

1. The inside of the machine helmet is easy to stain and get dirty, please clean this regularly. Chemicals such as hair dye etc can cause the machine to dysfunction.
2. Use a soft, dry cloth to wipe and clean. If water/liquids splash onto the control panel, use a soft dry cloth to remove immediately, otherwise this could also cause the machine to dysfunction.

  Attention !: Please do not use the following substances to clean: thinner, alcohol, gas, coal, oil or any other harmful chemicals

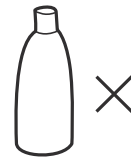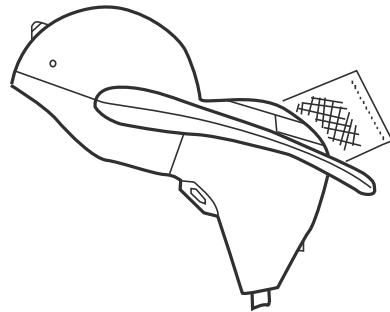


Thinner or Benzine

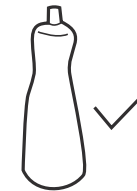 


Neutral detergent

Cautions

 
1. Before using please make sure that the service voltage is the same as the products appropriate rating.
2. Operating environment; an ambient temperature of 5'c -40'c; a relative humidity of less than 95%.
3. To ensure users safety, never insert foreign objects into the machine.
4. Be sure never to use flammable gas or use machine under similar environments.
5. After switching on the power; if you find any abnormal conditions, please contact the technical department immediately – do not attempt to repair yourself.
6. Don't remove the plug by pulling the cable. Please first hold the plug then pull.
7. This machine is strictly prohibited to use outdoors/outside.
8. If the cable is found to be damaged, in order to avoid danger, it should be replaced by the manufacturer.
9. Water must be purified. Don't add or use any cosmetic liquids, astringent, toning lotion, perfume, carbonated water or mineral water (un-pure tap water), otherwise that will induce the machines function and/or create a hyper susceptibility to customers skin.
10. Please keep children away from the machine when in use,
11. If you suffer from any medical condition, please consult your local GP before use.

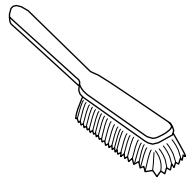

Brush away excess hair

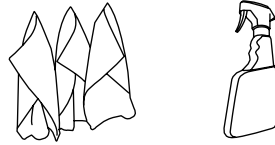 

 Clean surface with damp cloth or use simple soap & water solution.

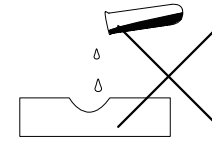

Avoid using corrosive cleaning agents such as bleaches.

Warranty

The warranty period is one year. DIR warrants to you, the original buyer, that goods shall be free of defects in material and/or workmanship attributable to manufacture for one year from date of receipt of product. Damage resulting from improper handling after merchandise is received, or from exposure to weather or extreme atmospheric conditions is not covered by the warranty. For any other information please contact our support team:

DIR BIRMINGHAM

66 Rea Street South
Birmingham
B5 6LB
UK

Tel:
+44(0)121 6434777

Email:
dirsalon@gmail.com

DIR LONDON

Unit 1 River Road
Business Park
33 River Road, Barking
Greater London
IG11 0DA
UK

Tel:
+44(0)20 8591 9310

Email:
dirsalon@gmail.com

DIR NEW YORK

575 Underhill Blvd.
Suite 170
Syosset, NY 11791
USA

Tel:
+1 (718)628-6668
+1 (800)728-2008

Email:
sales@dirsalonfurniture.com

DIR IRELAND

Unit 20, Goldenbridge Ind.
Estate Tyrconnell Road
Inchicore
Dublin 8
Republic of Ireland

Phone:
+353 (1) 429 7969

Email:
sales.ireland@dirgroup.ie